

iTop Twist iPad Counter Stand User Manual



Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual





Introduction

Thank you for purchasing this iTop Twist Floor Stand for the iPad2 and new iPad by Villa ProCtrl.

High design, functionality and quality were top of mind when developing this product, as we did not make any concessions in its construction and our choice of materials.

This iPad Stand is made out of high grade brushed Stainless Steel and DuPont Corian, the solid non-porous material approved for use for use in specialized environments (including laboratories and hospitals) and high-traffic places. Most importantly, Corian is easy to clean and small surface damage can be sanded out. The frame and support structure is made out of Stainless Steel, adding to the overall look, while increasing its weight for increased stability.

Reducing the environmental impact has also been a key factor in the development and production of this product. All of the materials used can be recycled, including all paper and the carton, that comply with the international FSC standards.

We are confident that you will enjoy this product and will appreciate our attention to detail.

Thank you for taking the time to read this manual. We recommend that you keep it for future reference.

The Villa ProCtrl team



Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands


T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

Important Safety Instructions:

For your own safety, please read the following important instructions carefully in their entirety, before assembling the stand -

1. Read and follow these instructions fully.
2. Keep these instructions.
3. Heed all warnings.
4. Clean only as instructed in this manual.
5. Protect the USB cord from being walked on or pinched or from getting stuck into the stand.
- 6 Use this stand with the Apple iPad version 2 and new iPad only.
7. While we take great care to remove all of the sharp edges from the Stainless Steel components, please be careful when handling.
8. Avoid injury when moving the stand, as it is heavy.
9. While the stand has been designed for maximum stability, please place it on a level and solid surface, in a location that minimizes the possibility of it being accidentally tipped over. In cases where this is a distinct possibility, please bolt the stand to the floor or a floor-board [Order the option for having 4 holes drilled into the Stainless Steel base plate].
10. The stand is for indoor use only!


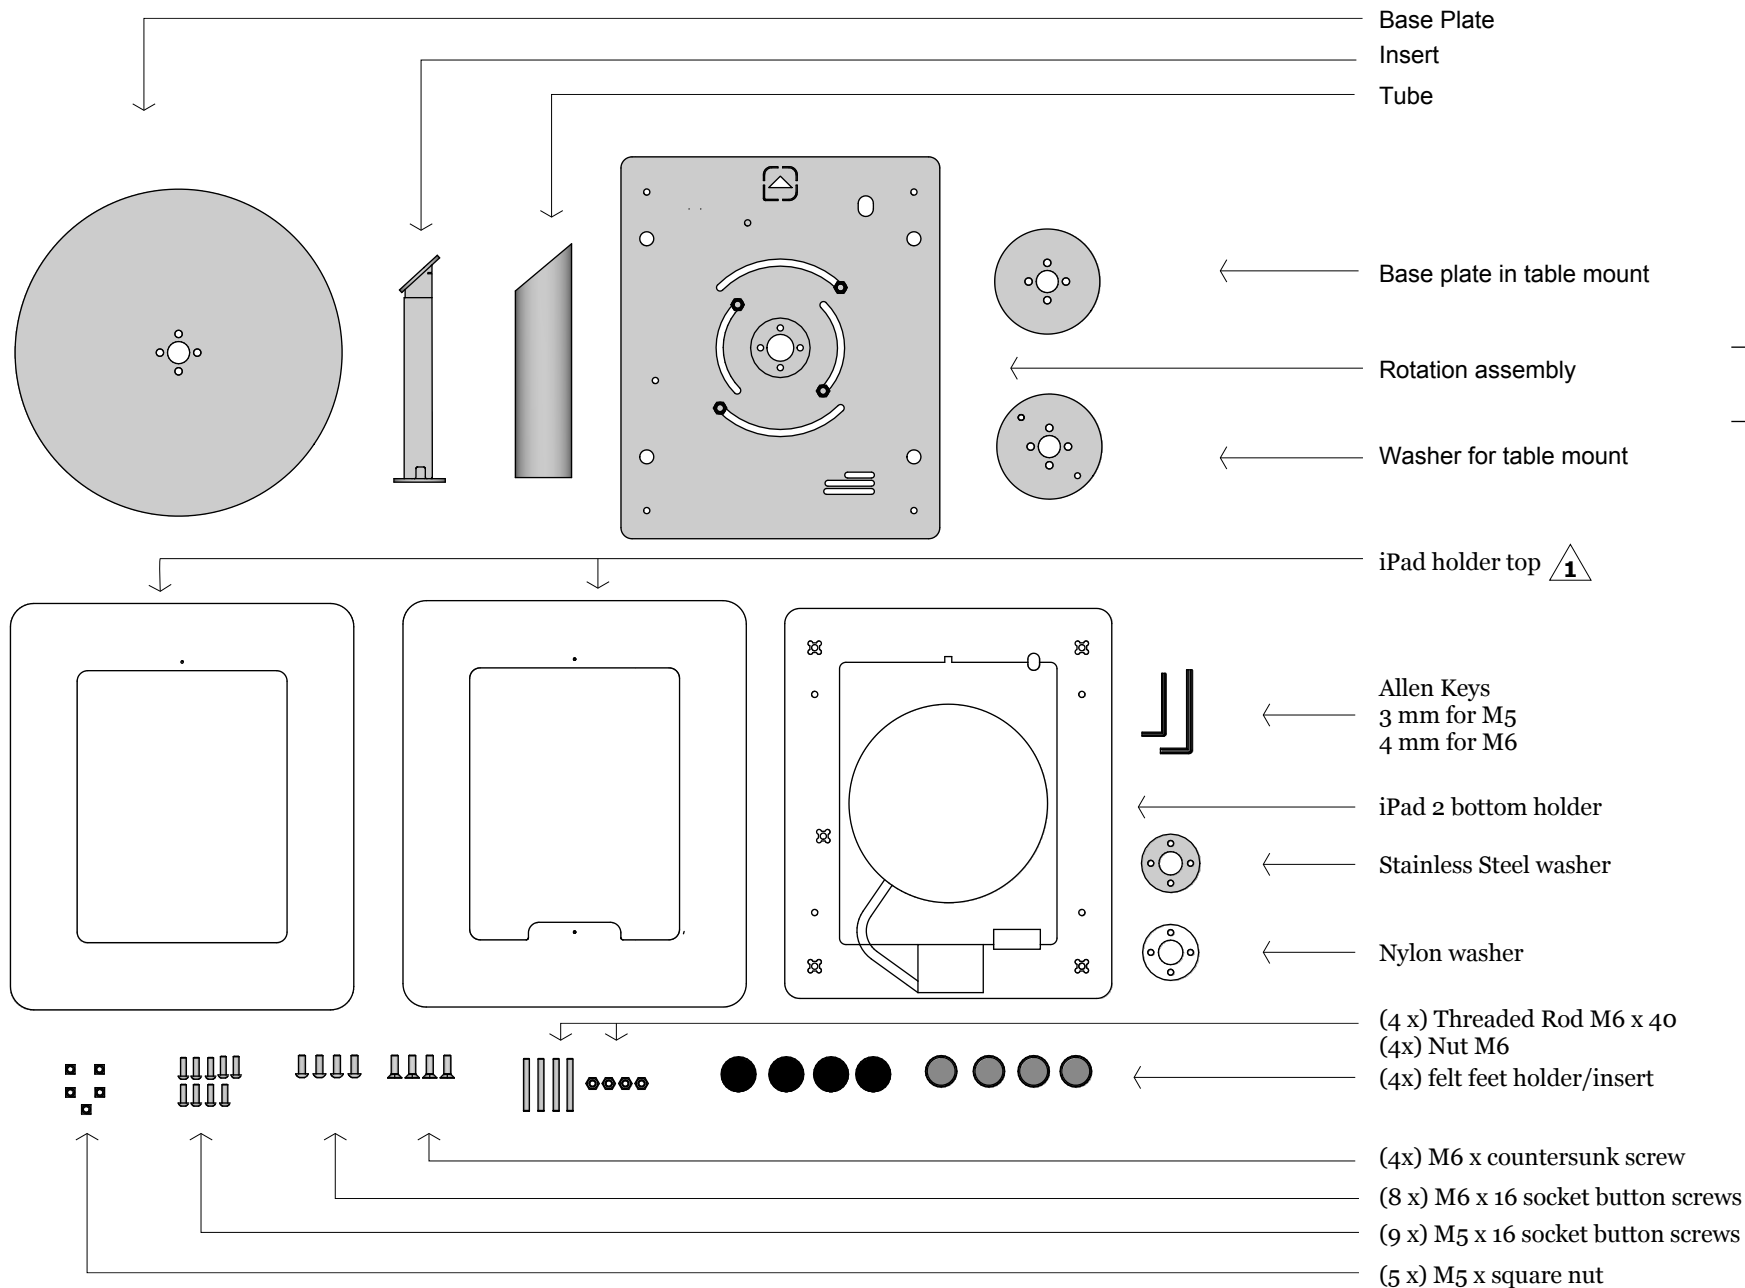




Mounting options


Fixed option where the Counter Stand is bolted on the table and the USB cable is fed through the counter top and desk / counter surface.

Table /counter top

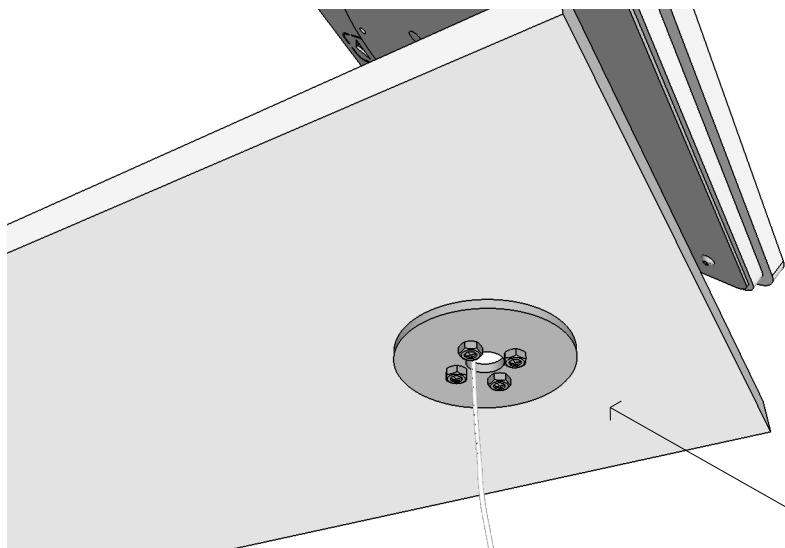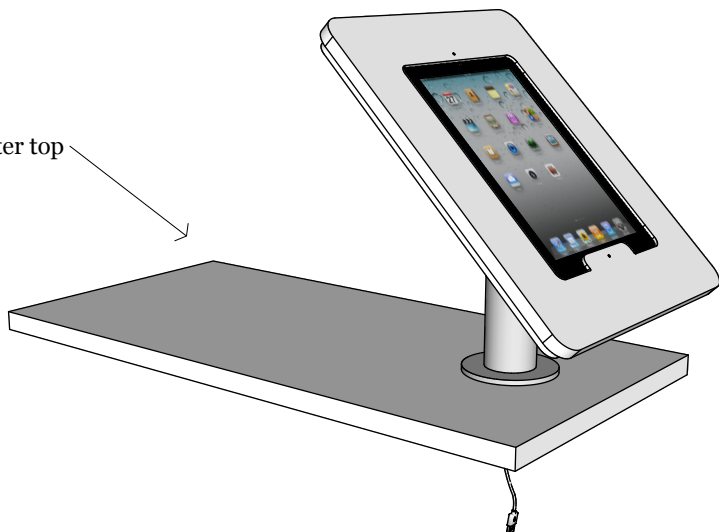

Washer and bolts for fixed mount

Free standing option where the Counter Stand can be placed freely on a desk / counter.

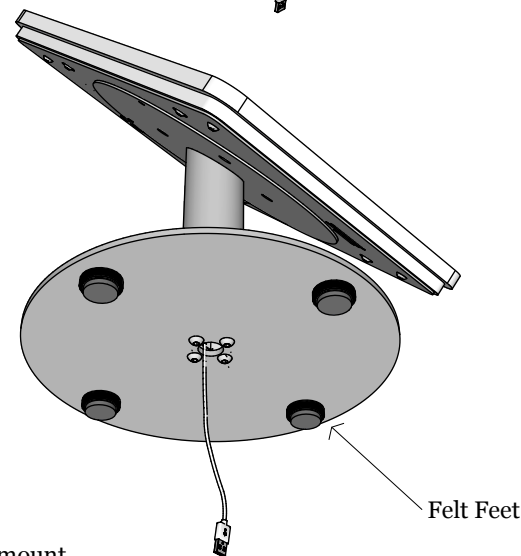

Felt Feet



Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual



Frame fixed mount option

- Remove protective foil.
- Align parts as shown and tighten 4 x M6 Nut.





Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

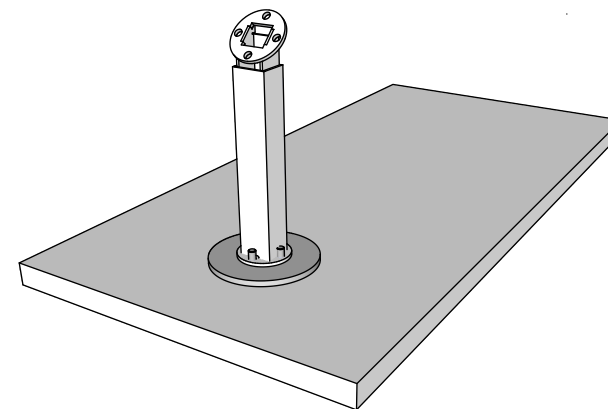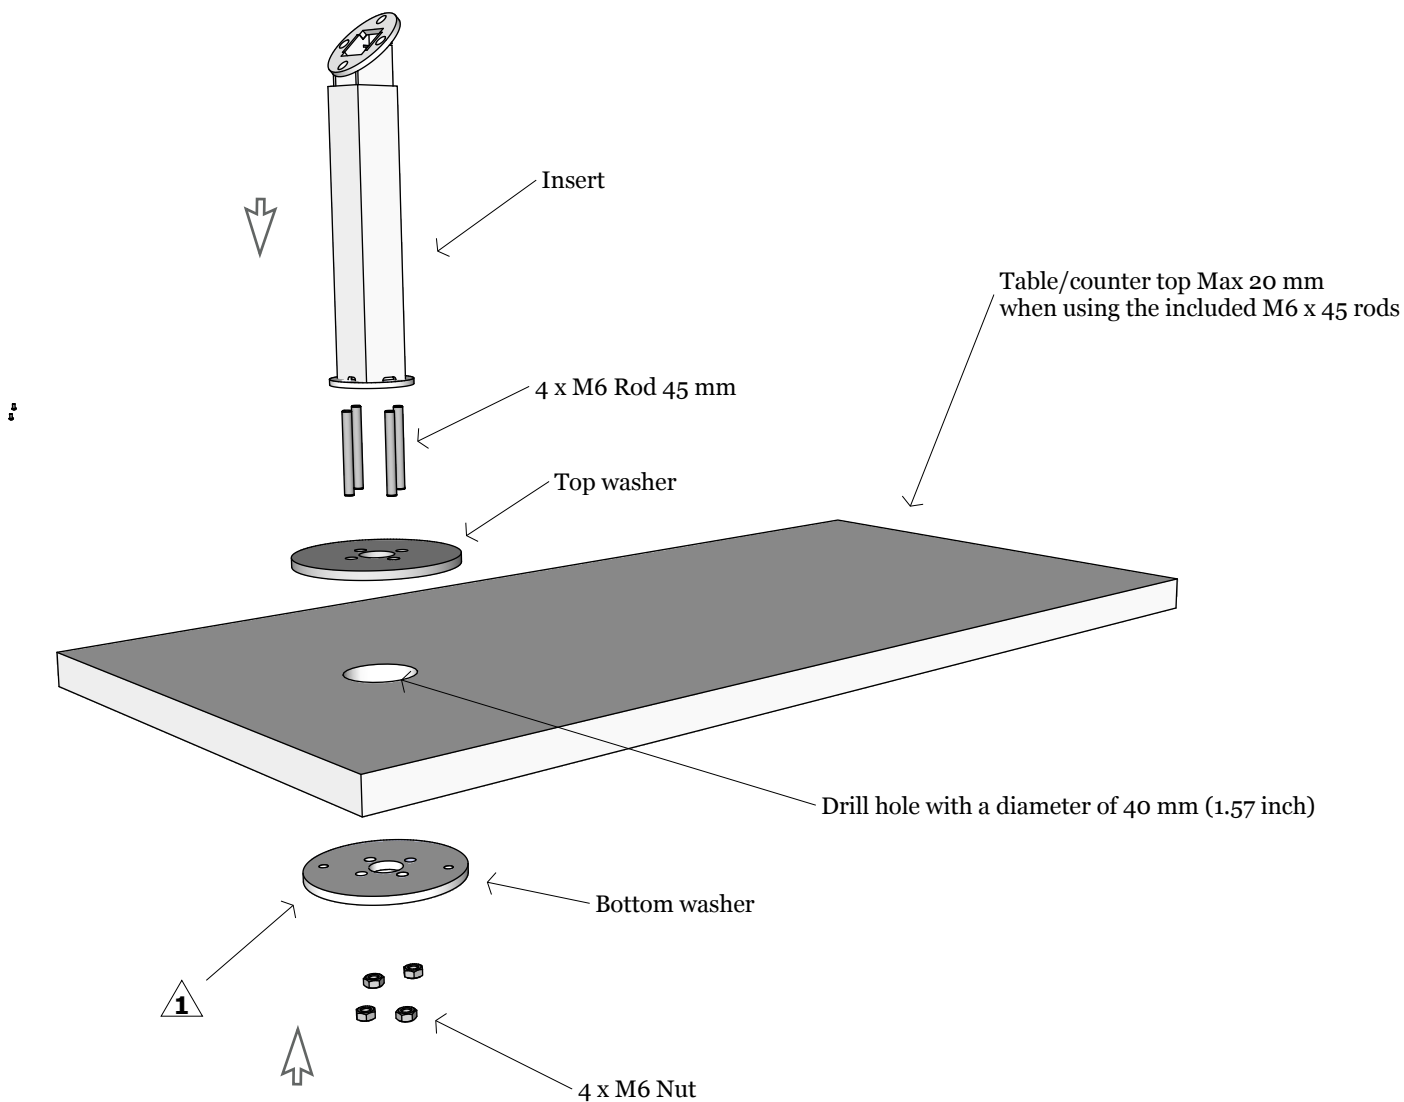

1 To prevent accidental rotation; insert one or two M5 screws in the outer holes (screws not included)



Free standing counter stand frame assembly



- Make sure protective foil is at the top of the base plate.
- Place a self adhesive feet holder on each corner as shown.
- Align felt inserts as shown and press tightly into feet holder.
- Remove protective foil.
- Align parts as shown and tighten M6 x 16 socket button screws.



Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

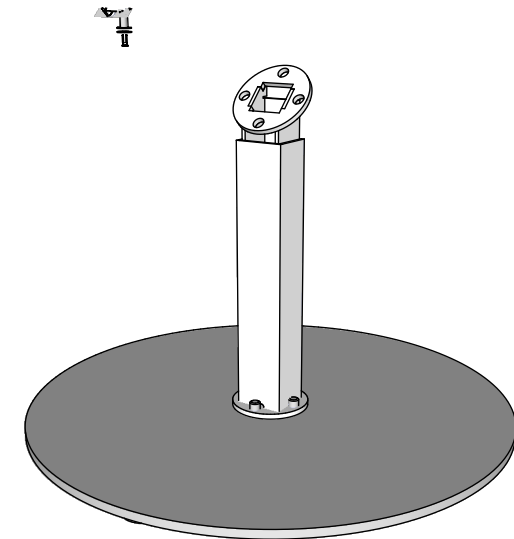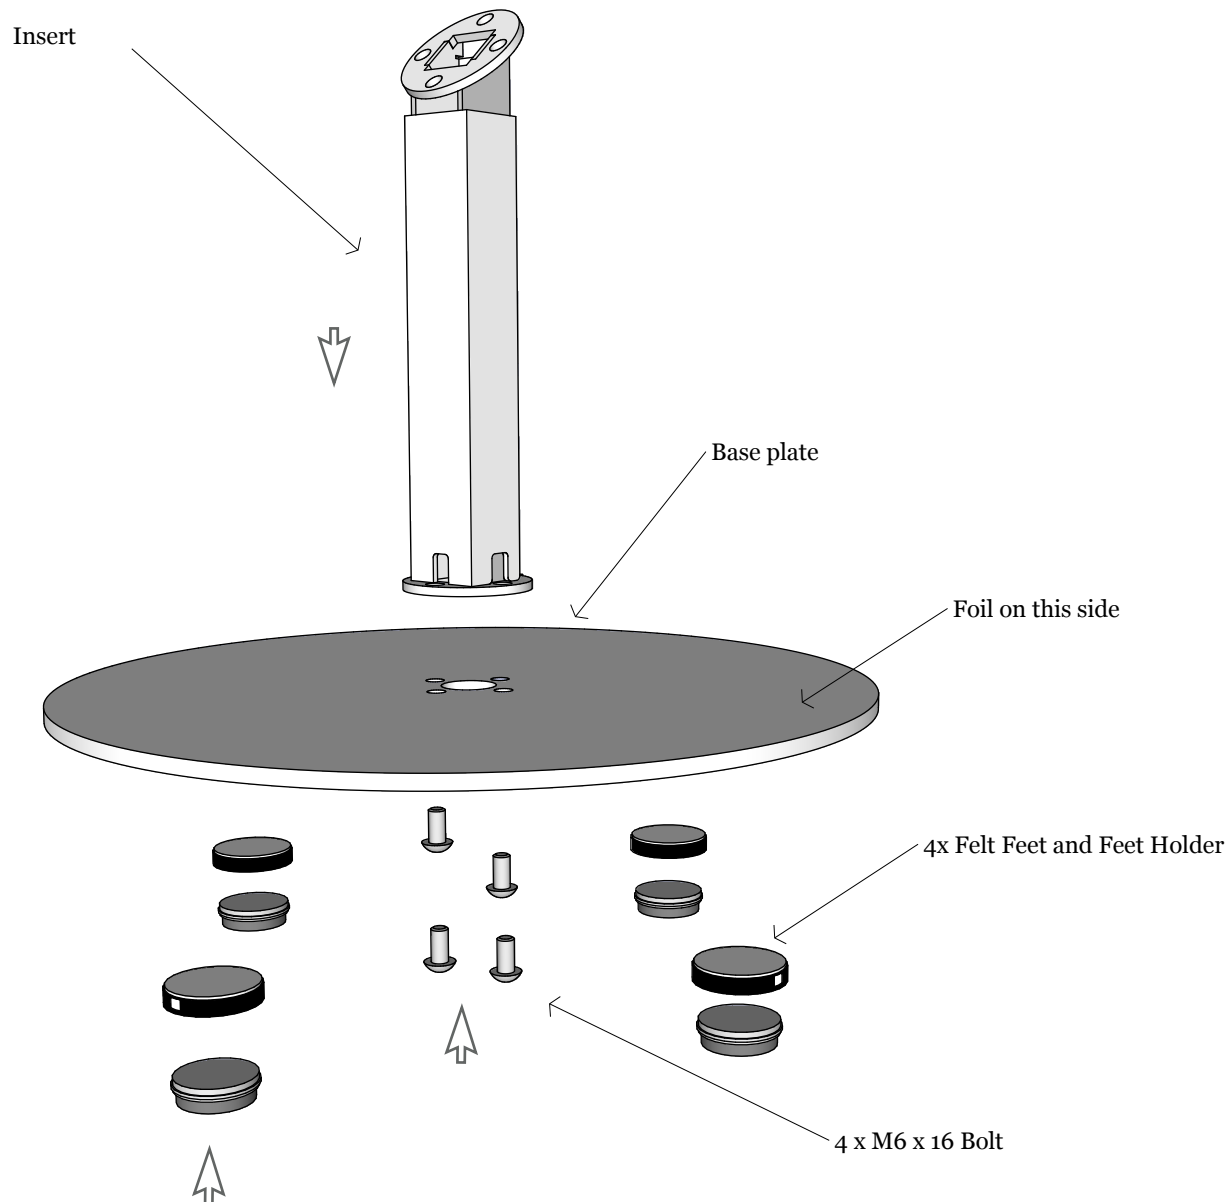



Tube placement both versions.

- Slide tube over insert as shown.




Villa ProCtrl


Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

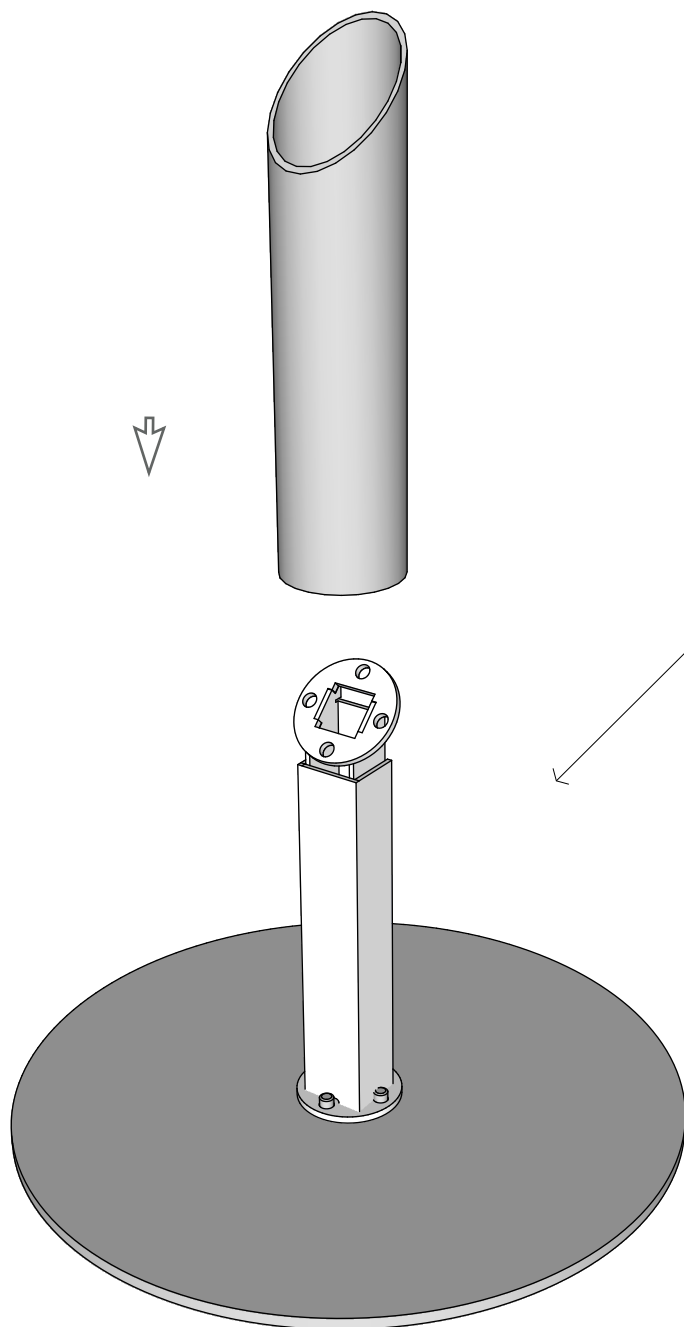

Frame sub assembly

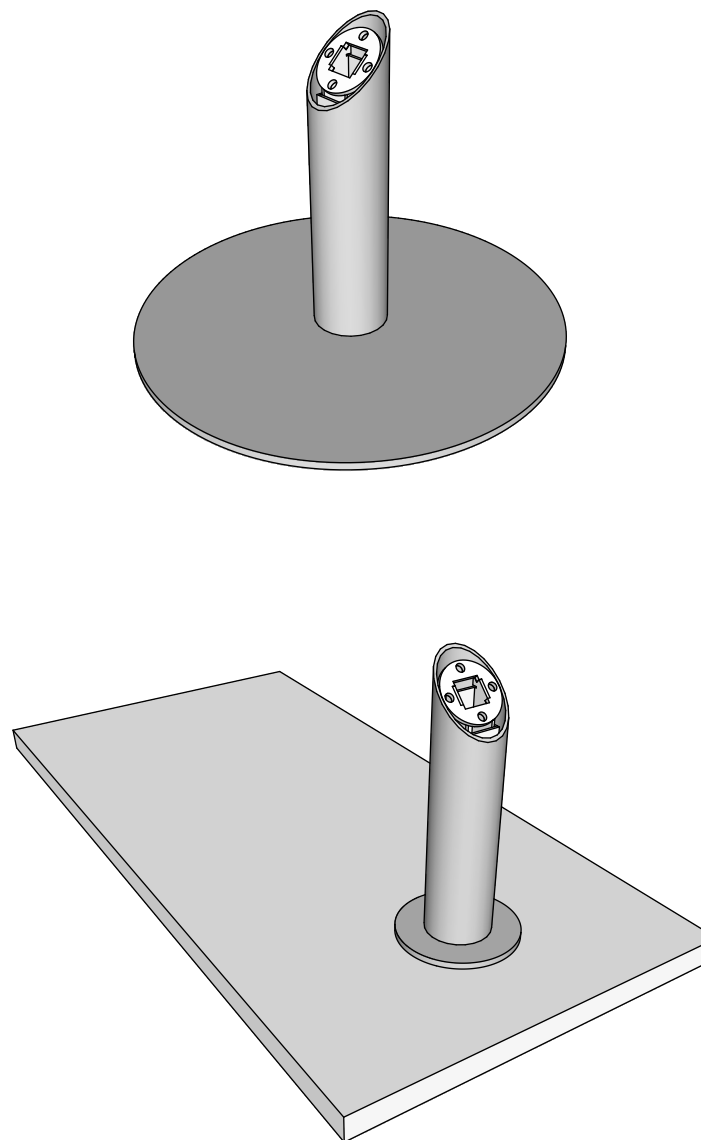



ITop Rotor plate assembly

- Align parts as shown and tighten (5 x) M5 x 16 socket button screws




Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

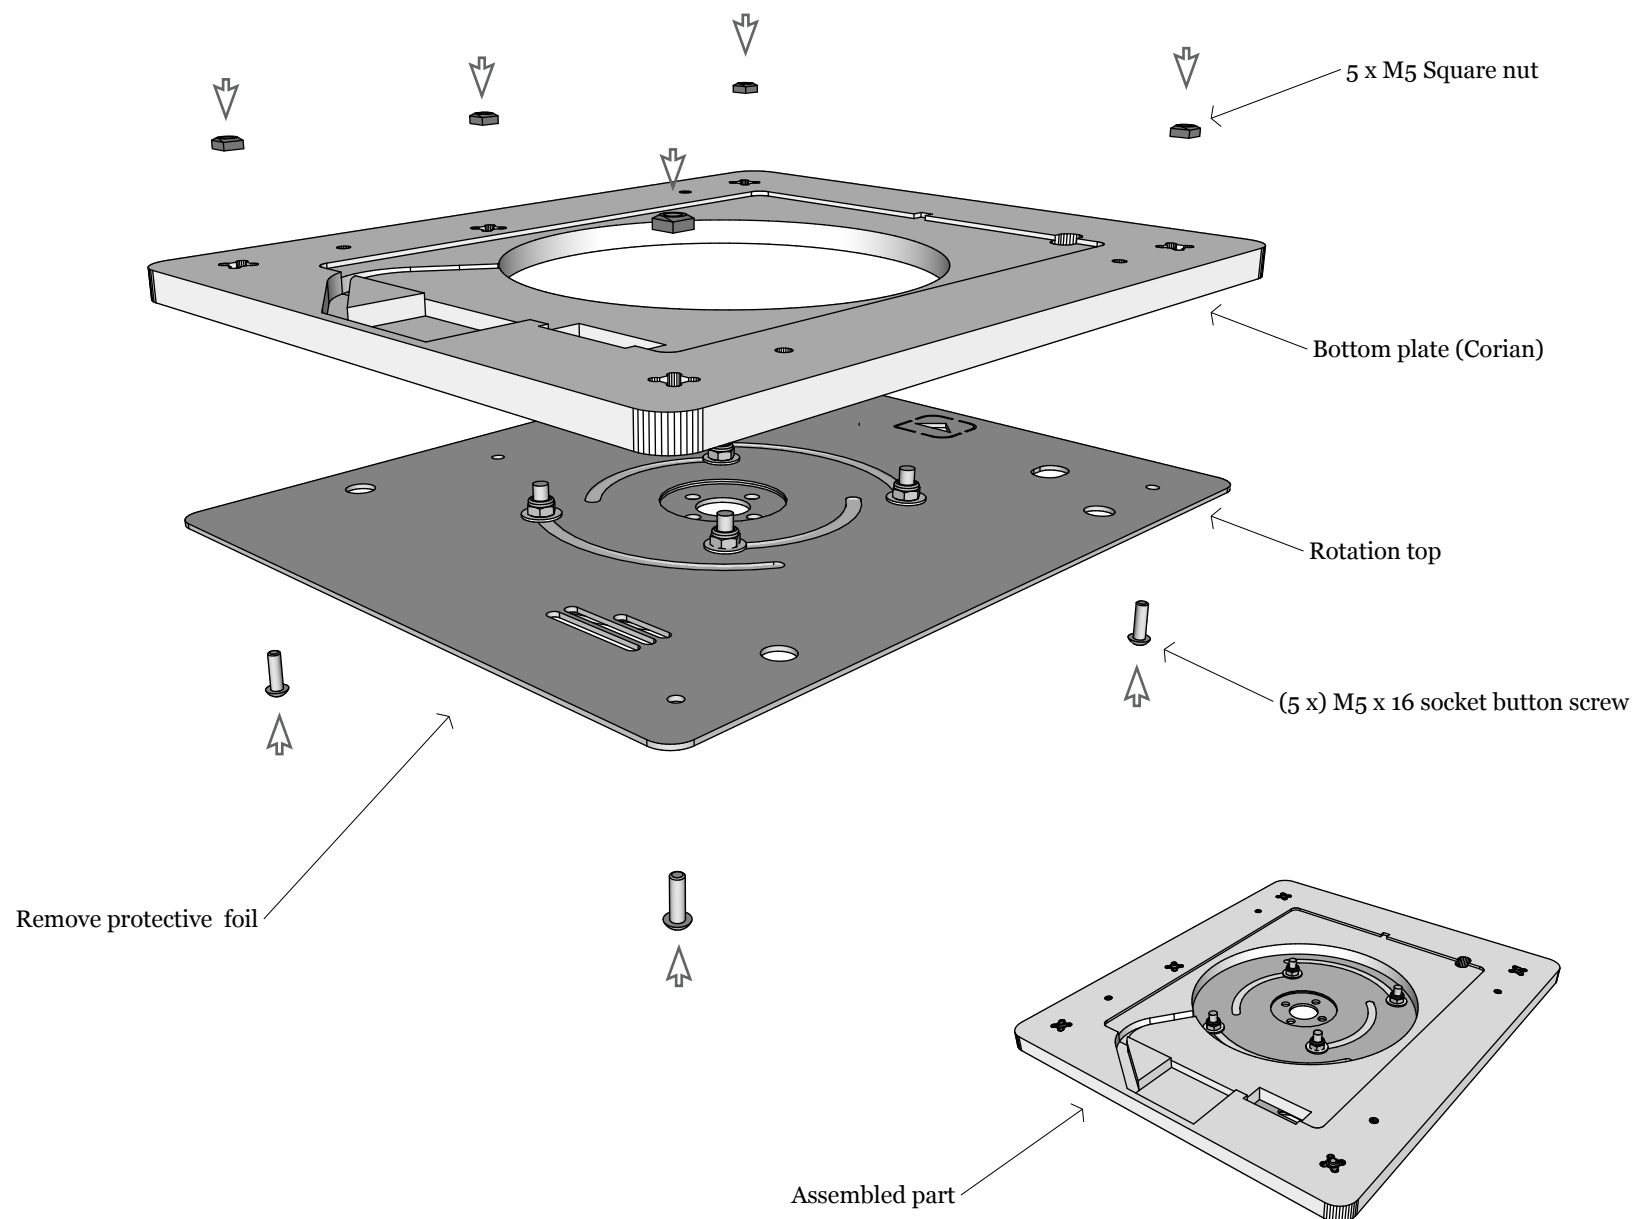



ITop Assembly

- Align parts as shown and tighten 4 x M6 x 16 bolts with included tool
- Make sure the Nylon ring (washer) is in the proper position




Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com


PROJECT
Counter Stand User Manual

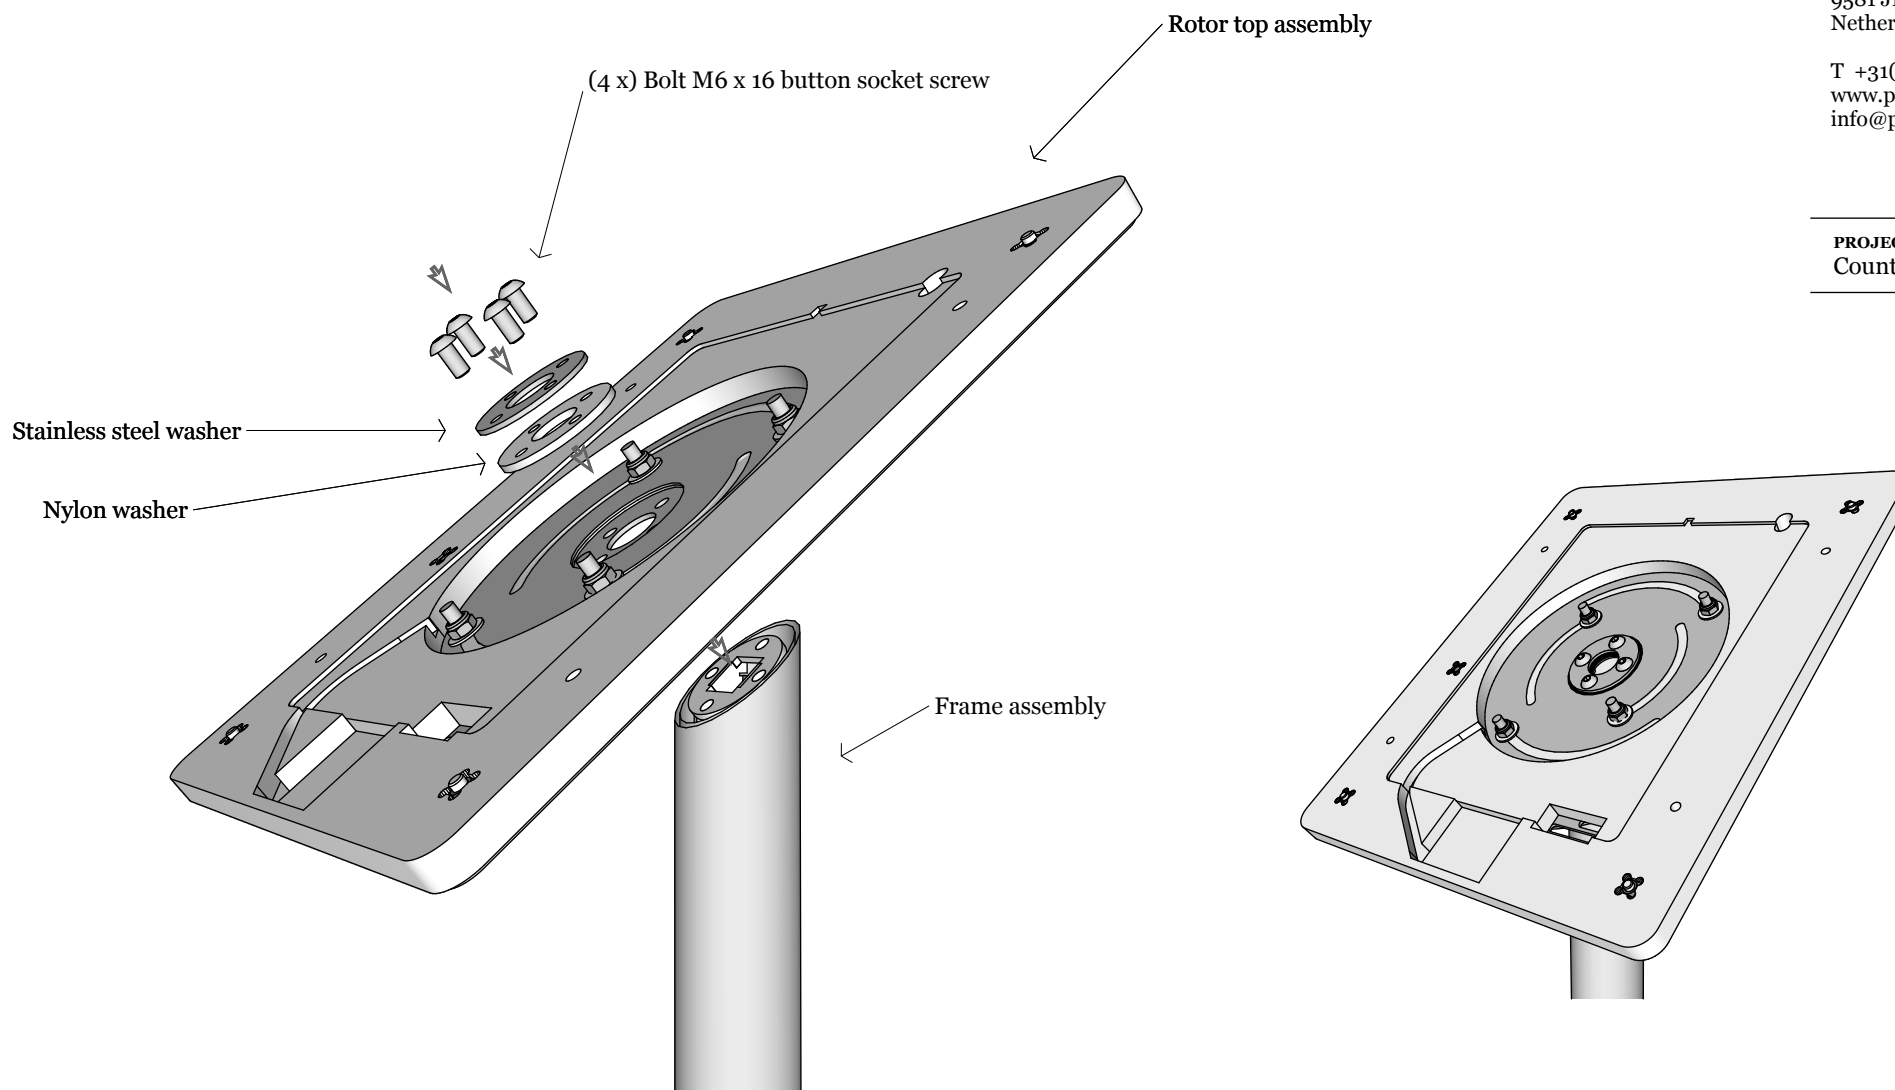



Final Assembly

- Lead USB docking cable through the tube and dry fit cable and connector as shown.

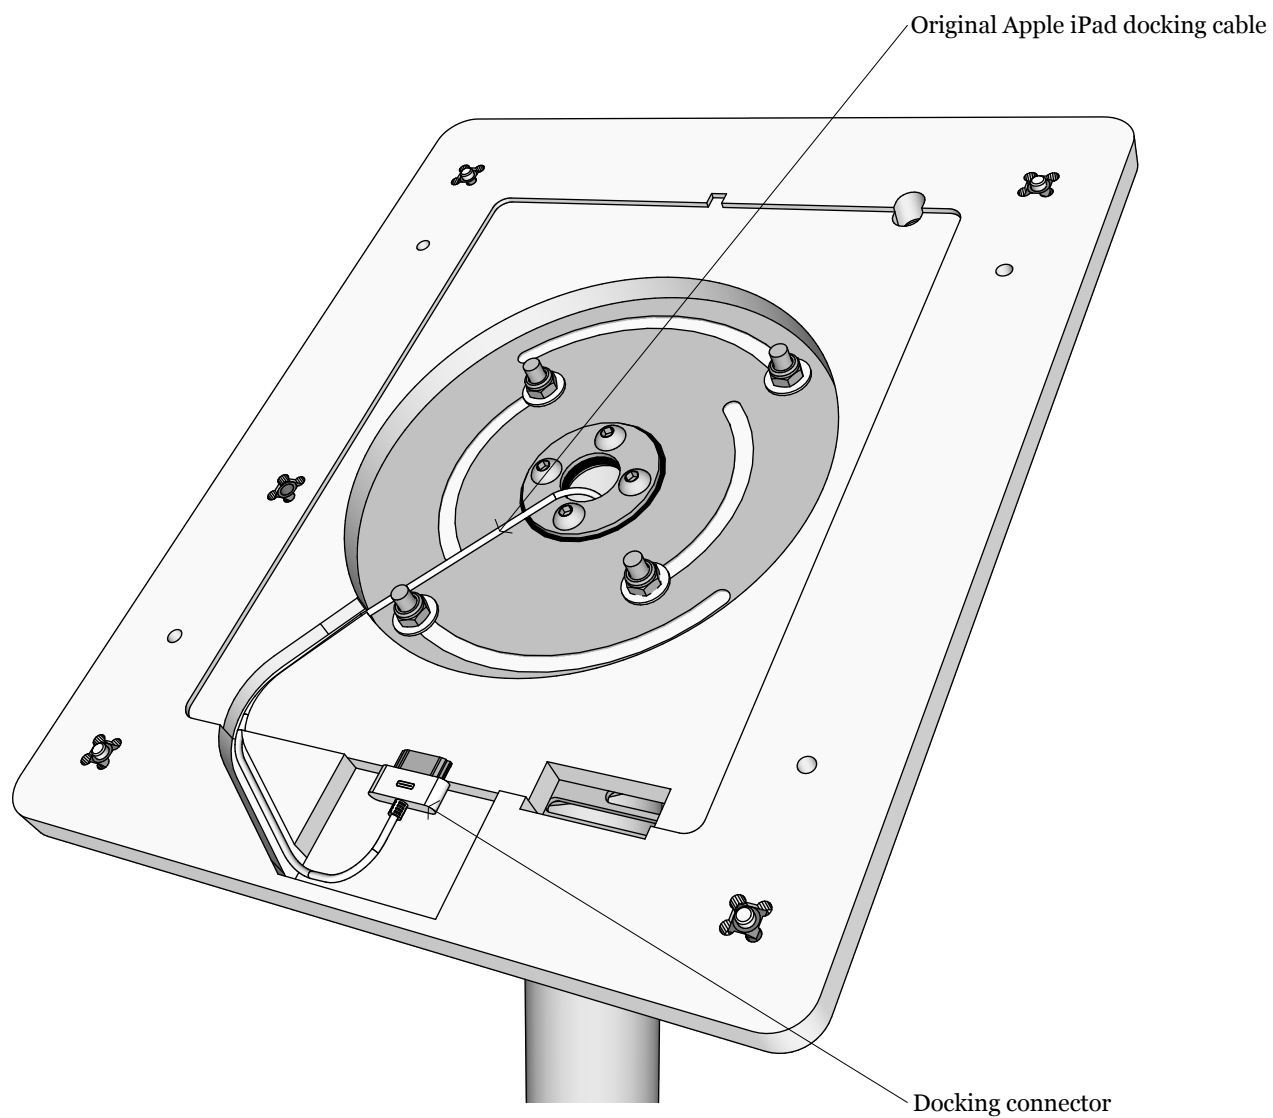

Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual



Velt inserts

- Follow these instructions only when using the iPad 2 and before you place the ipad in the Corian top holder.
- Remove protective foil and stick velt parts as shown in pictures below




Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands


T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

 Place velt parts
as shown in picture on the right

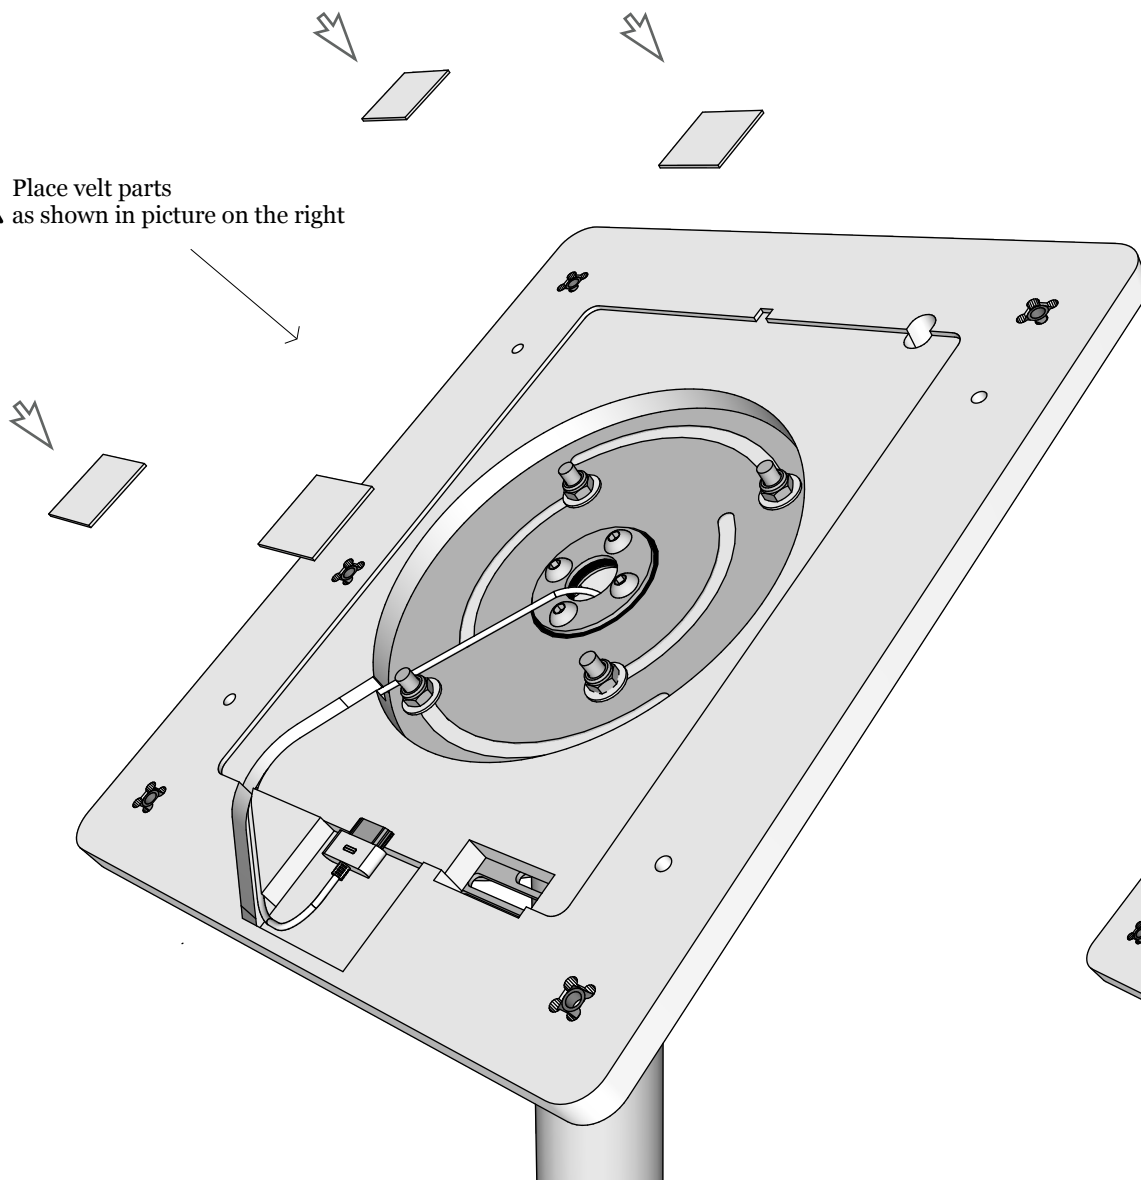

Placement of Velt parts

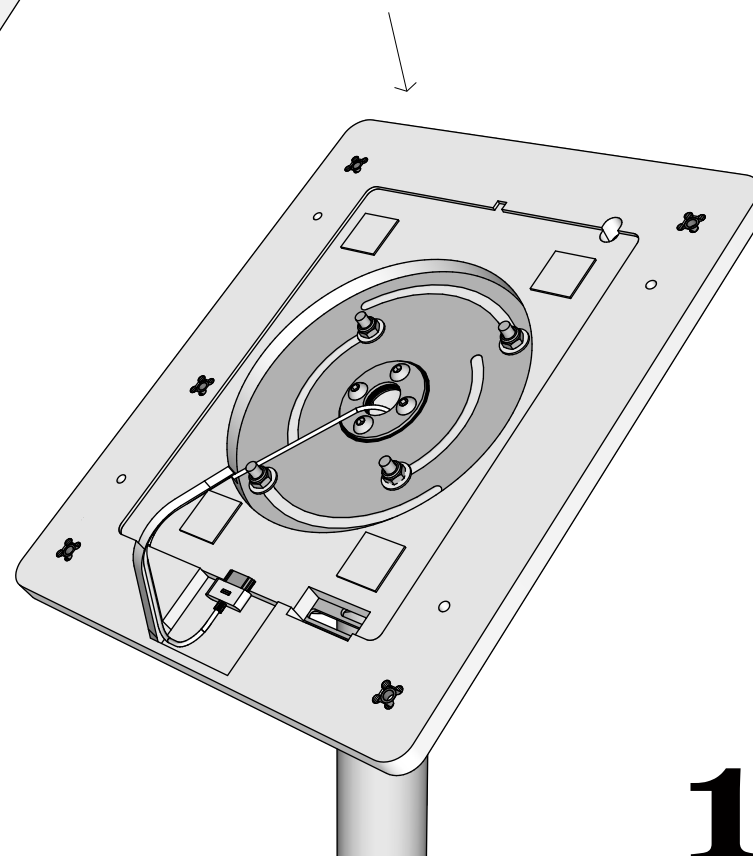

 Use this step only for use with iPad 2



Final Assembly

- Connect Apple iPad docking cable.
- Position Apple iPad as shown and place top cover over it.
- Place (4 x) M5 x 16 socket button screws as shown and tighten Allen key (included)




Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

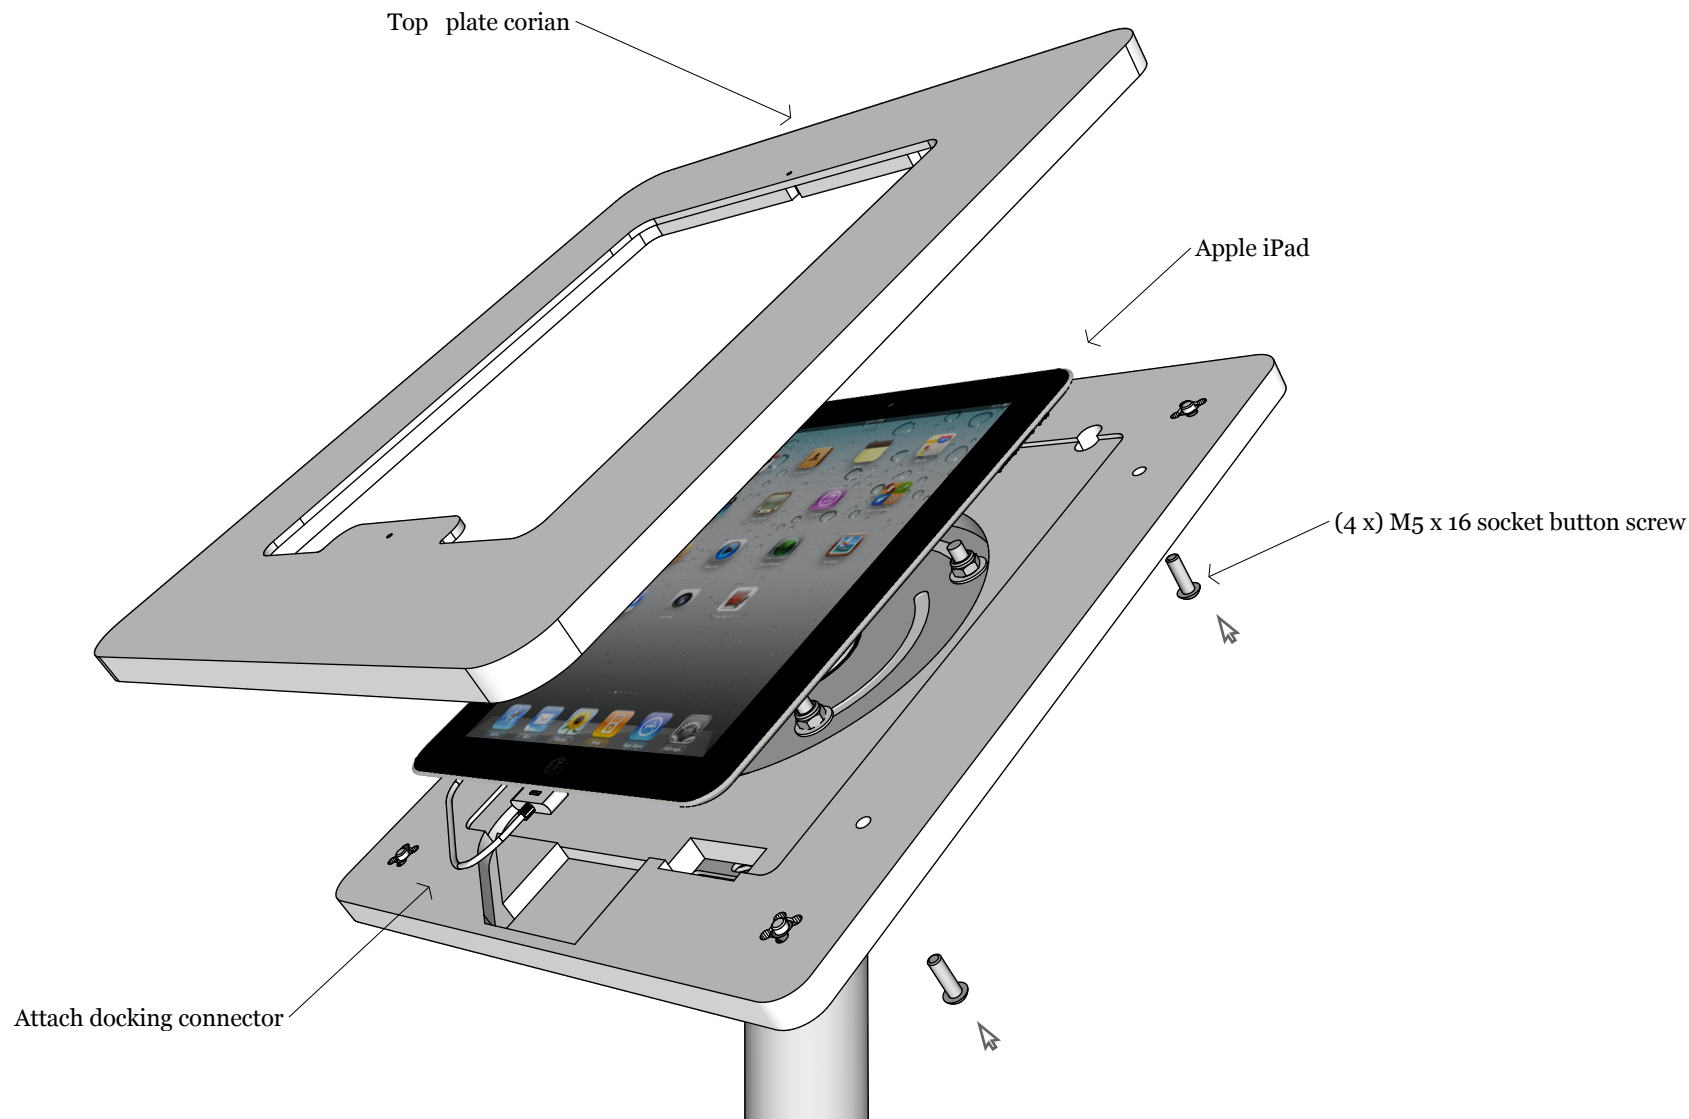


Make sure cable is properly led through the Corian top before securing the M5 x 16 screws




Rotation

- Top can be rotated as shown in pictures below.
- To lock unit into portrait or landscape mode insert (1x) M5 x 16 socket button screw as shown (in portrait or landscape mode)

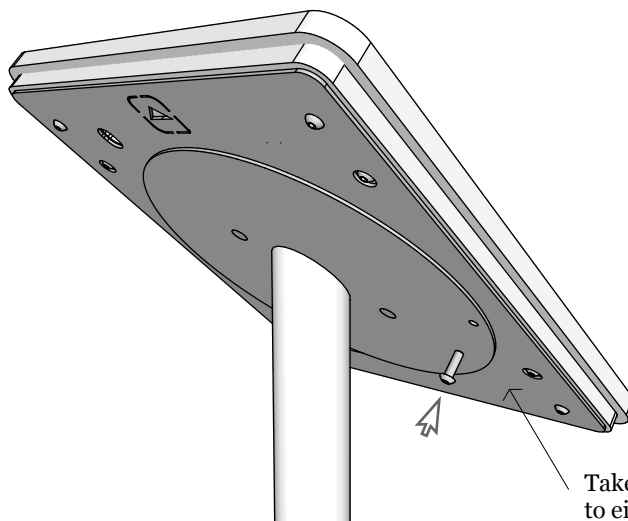

Take out or insert M5 x 16 bolt
to either allow or deny rotation

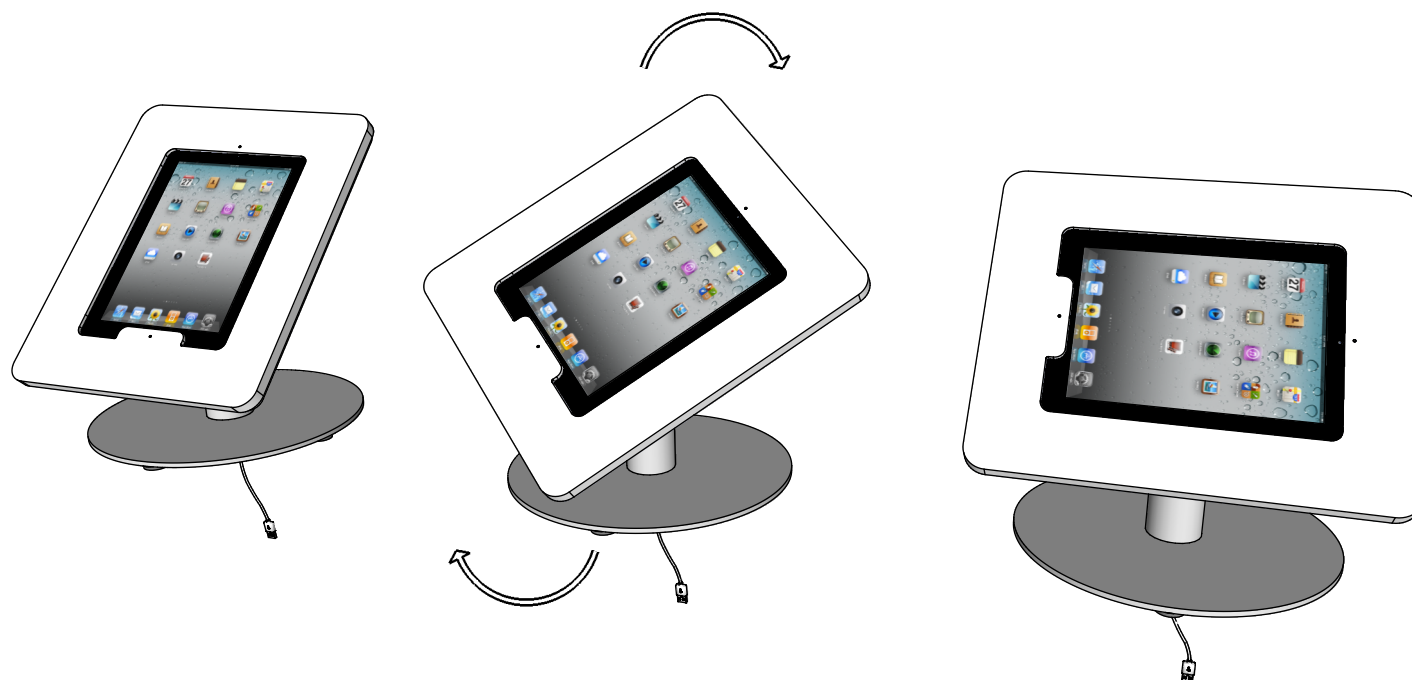

Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual



Corian top

Most dirt & residue

Use soapy water, ammonia based cleaner (not window cleaner), rinse and wipe completely dry. Commercially available solid surface cleaners, such as Clean EnCounters® will also work well.

Preventing hard water marks

Rinse and wipe completely dry after cleaning; clean up spills before they dry.

Removing hard water marks

Use a cleaner formulated for removing hard water marks such as CLR or Lime-A-Way.

Difficult residue

Spray residue with Deep Cleaner for DuPont Corian® from Stone Care International. (www.stonecare.com) Follow instructions on the bottle. Wash area with soapy water, rinse and wipe completely dry. If residue persists, follow steps below for removing dulling film.

Disinfecting

Occasionally, wipe surface with diluted household bleach (1 part water/1 part bleach). Rinse top thoroughly with water and wipe completely dry.

Stainless Steel

Daily cleaning:

for light soil, use a clean, soft cloth or sponge and one of the following:

- Mild detergent and water.
- A solution of white vinegar and water.
- Formula 409 Glass and *surface cleaner or a similar multi-surface cleaner.

Rinse and dry. To polish and help prevent fingerprints, follow with a Stainless Steel Spray.

For moderate to heavy soil:

Use a clean, soft cloth or damp sponge and clean with nonabrasive cleaner such as a baking soda paste or *Bon Ami. Rinse and dry.

More stubborn soils:

Can be removed using a damp *Scotch-Brite pad. Be sure to rub evenly with the grain of the stainless steel. Rinse immediately and dry.




Villa ProCtrl

Sluiskade 134
9581 JR Musselkanaal
Netherlands

T +31(0)20.716. 36. 55
www.pro-ipad-stand.com
info@pro-ipad-stand.com

PROJECT
Counter Stand User Manual

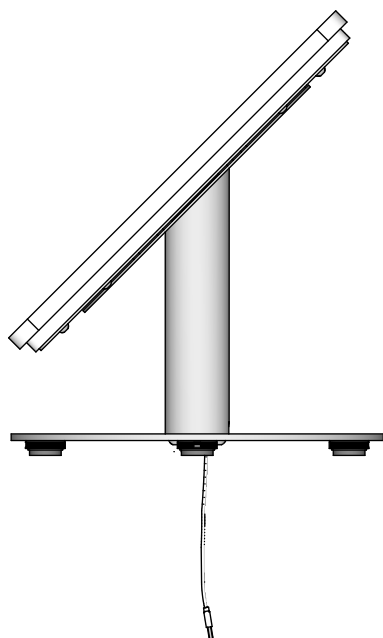

Limited Warranty

Villa ProCtrl warrants this product to be free from defects in material and workmanship (subject to the terms set forth below).

Villa ProCtrl will repair or replace this product (at Villa ProCtrl's option) or any defective parts in this product. Warranty periods may vary from country to country. To obtain warranty service, please consult the dealer/reseller from whom you purchased the product and please retain your proof of purchase (in the form of a bill of sale or receipted invoice, which is evidence that the product is within the warranty period). This warranty is invalid if the product was not purchased from a Villa ProCtrl authorized dealer. If you are not satisfied with their response, please contact Villa ProCtrl directly with specific questions or concerns.

Please retain all original packaging, as you will need to ship the product or specific parts of it, in either its original packaging (or packaging affording an equal degree of protection).

This warranty does not cover cosmetic or structural damage due to misuse, improper installation or maintenance, abuse, accident, negligence, modification, attempted repairs by a third party not authorized by Villa ProCtrl or acts of God, of the product or any part of it. Any of the aforementioned will automatically and totally void the offered product warranty.

Further, this Warranty does not cover third party products that are attached or added to this product.

Some countries and U.S. states do not allow the exclusion or limitation of incidental or consequential damages or implied warranties, so the above exclusions may not apply to you. This warranty gives you specific legal rights and you may have other statutory rights, which will vary from country to country and state to state.

For any service, either in or out of warranty, please contact your dealer/reseller.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or any other means, in any form, without prior written permission of Villa ProCtrl. All registered are the property of their respective owners.

© Copyright 2012 Villa ProCtrl. Commercial in Confidence.

➔ iTop Twist Floor Stand



➔ iTop Twist Wall Mount

